

### **General Description**

The Gotop GT-1108-MTR is a complet e GPS engine module that features super sensitivity, ultra low power and small for m factor. The GPS signal is applied to the antenna input of module, and a complet e serial data message with position, veloc ity and time information is presented at the serial interface with NMEA protocol or c ustom protocol.

Its -165dBm tracking sensitivity exten ds positioning coverage into place like ur ban canyons and dense foliage environm ent where the GPS was not possible bef ore. The small form factor and low power consumption make the module easy to i ntegrate into portable device like PNDs, mobile phones, cameras and vehicle navi gation systems.

#### **Applications**

- LBS (Location Based Service)
- PND (Portable Navigation Device)
- Vehicle navigation system
- Mobile phone



Figure1:GT-1108-MTR TopView

#### **Features**

- Build on high performance, low-powerMT3337 chipset
- Ultra high sensitivity:-165dBm
- Extremely fast TTFFat low signal level
- Built in high gain LNA
- Low power consumption:Max20mA@3.3V
- NMEA-0183 compliant protocol or cust om protocol
- Operating voltage: 2.8V to 4.3V
- Operating temperature range:-40to85°C
- SMD type with stamp holes
- Small form factor: 11.4x8.8x2.0mm
- RoHS compliant (Lead-free)



### **Performance Specification**


Parameter	Specification		
Receiver Type	L1 frequency band, 22tra	acking/66acquisition-channel	
Sensitivity	Tracking Acquisition	-165dBm -163dBm(hot) -148dBm(cold)	
Accuracy	Position Velocity Timing (PPS)	5m CEP without SA 0.1m/s without SA 100mS RMS	
Acquisition Time	Cold Start Warm Start Hot Start Re-Acquisition	30s 22s 1s <1s	
Power Consumption	Tracking Acquisition Sleep/Standby	20mA @3.3V Vcc 20mA TBD	
NavigationDataUpdate Rate	1Hz		
Operational Limits	Altitude Velocity Acceleration	Max 18,000m Max 515m/s Less than 4g	

## **Interfaces Configuration**

**Power Supply:** Regulated power for the GT-1108-MTR is required. The input voltage Vcc should be 3.3V ±10%, maximum, current is no less than 20mA. Suitable decoupling must be provided by external decoupling circuitry.

**Antenna:** The GT-1108-MTRGPS receiver is designed for supporting the active antenna or passive antenna connected with pin RF\_IN. The gain of active antenna should be no less than 2.5dB. The maximum noise figure should be no more than 2.5dB and output impedance is at 50 Ohm.



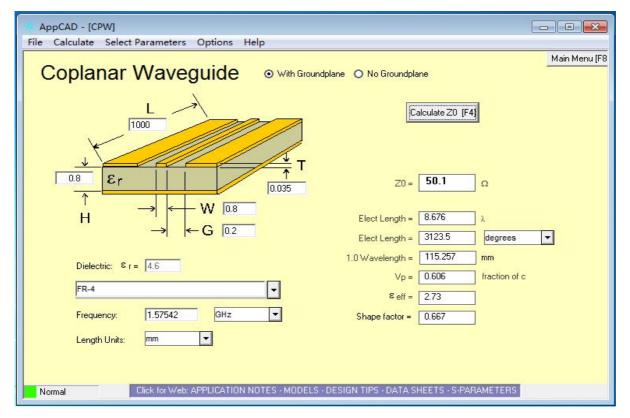

**UART Ports:** The module supports two full duplex serial channels UART. All serial connections are at 3.0V CMOS logic levels, if need different voltage levels, use appropriate level shifters. The baud rate of both serial ports are fully programmable, the data format is however fixed: X, N, 8, 1, i.e. X baud rate, no parity, eight data bits and one stop bit, no other data formats are supported, LSB is sent first. The modules default baud rate is set up 9600bps, however, the user can change the default baud rate to any value from 4800 bps to 115kbps. UART is used e.g. for booting and NMEA interface.



## **Pin Description**

Pin No.	Pin name	I/O	Description	Remark
1	Vcc	I	Module Power Sup	pply(Input 3.3V)
2	GND	G	Grour	nd
3	RXD	I	UART Serial Data Input, Pull up	(75KΩ) if not used
4	TXA	0	UART Serial Data Output ,Pull up (75KΩ) if not used	
5	GND	G	Ground	
6	GND	G	Ground	
7	RF_IN	I	GPS Signal Input	
8	GND	G	Ground	
9	VBAT	I	RTC Battery Input	
10	RESET	I	Module Reset (	Active Low)

# Pin Assignment


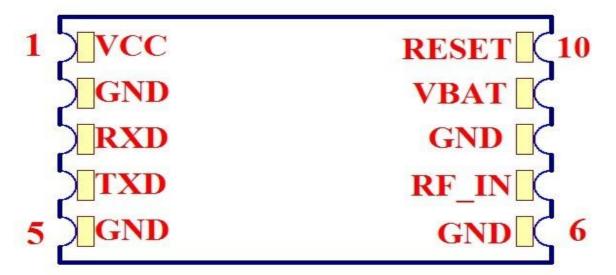


Figure 2: GT-1108-MTR Pin Package



#### **Hardware Interface**

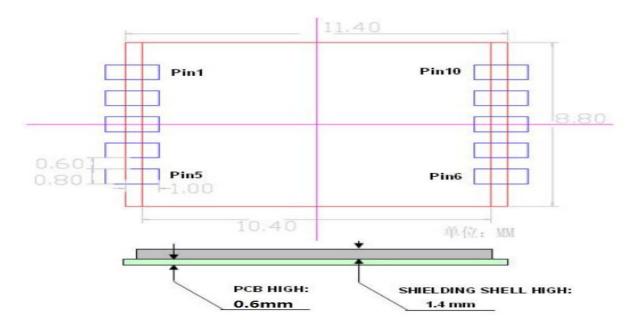

## **Electrical Characteristics**

## **Absolute Maximum Rating**

Parameter	Symbol	Min	Max	Units
Power Supply				
Power Supply Volt.	Vcc	2.8	4.3	V
Input Pins				
Input Pin Voltage I/O	VBAT	2.0	3.6	V
Input Pin Voltage I/O	TXD&RXD	-0.3	3.3	V
Environment				
Storage Temperature	Tstg	-40	125	°C
PeakReflow Soldering Temperature	Tpeak		260	°C
Humidity			95	%



Note: Absolute maximum ratings are stress ratings only, and functional operation at the maxims is not guaranteed. Stress beyond the limits specified in this table may affect device reliability or cause permanent damage to the device. For functional operating conditions, refer to the operating conditions tables as follow.

#### **Operating Conditions**

Parameter	Symbol	Condition	Min	Тур	Max	Units
Power supply voltage	Vcc		2.8	3.3	4.3	V
Powersupplyvoltageripple	Vcc_PP	Vcc=1.8V			20	mV
Consumption current	lcc	Vcc=1.8V		20	25	mA
Input high voltage	V <sub>IH</sub>		0.7xVcc		Vcc+1.0	V
Input low voltage	V <sub>IL</sub>		-0.3		0.3xVcc	V
Output high voltage	V <sub>OH</sub>		0.8xVcc		Vcc	V
Output low voltage	V <sub>OL</sub>		0		0.2xVcc	V
Operating temperature	Topr		-40		85	°C

#### **Software Protocol**

#### **NMEA 0183 Protocol**

The NMEA protocol is an ASCII-based protocol, Records start with a \$ and with carriage return/line feed. GPS specific messages all start with \$GPxxx where xxx is a three-letter identifier of the message data that follows. NMEA messages have a checksum, which allows detection of corrupted data transfers.

The Gotop GT-1108-MTRsupports the following NMEA-0183 messages: GGA, GLL, GSA, GSV, RMC and VTG

Table 1: NMEA-0183 Output Messages



NMEA Record	DESCRIPTION
GGA	Global positioning system fixed data
GLL	Geographic position—latitude/longitude
GSA	GNSS DOP and active satellites
GSV	GNSS satellites in view
RMC	Recommended minimum specific GNSS data
VTG	Course over ground and ground speed

## **GGA-Global Positioning System Fixed Data**

### Table 2 contains the values of the following example:

\$GPGGA, 161229.487,3723.2475,N, 12158.3416,W, 1,07,1.0,9.0,M.0000\*18

**Table 2: GGA Data Format** 

Name	Example	Units	Description
Message ID	\$GPGGA		GGA protocol header
UTC Position	161229.487		hhmmss.sss
Latitude	3723.2457		ddmm.mmmm
N/S indicator	N		N=north or S=south
Longitude	12158.3416		dddmm.mmmm
E/W Indicator	W		E=east or W=west
PositionFixIndicator	1		See Table 2-1
Satellites Used	07		Range 0 to 12
HDOP	1.0		Horizontal Dilution of Precision
MSL Altitude	9.0	meters	



Units	М	meters	
Geoids Separation		meters	
Units	М	meters	
Age of Diff.Corr.		second	Null fields when DGPS is not Used
Diff.Ref.Station ID	0000		
Checksum	*18		
<cr> <lf></lf></cr>			End of message termination

**Table 2-1: Position Fix Indicators** 

Value	Description
0	Fix not available or invalid
1	GPS SPS Mode, fix valid
2	Differential GPS, SPS Mode, fix valid
3	GPS PPS Mode, fix valid

## **GLL-Geographic Position – Latitude/Longitude**

### Table 3 contains the values of the following example:

\$GPGLL, 3723.2475, N,12158.3416, W,161229.487, A\*2C.

**Table 3: GLL Data Format** 

Name	Example	Units	Description
Message ID	\$GPGLL		GLL protocol header
Latitude	3723.2475		ddmm.mmmm
N/S Indicator	N		N=north or S=south
Longitude	12158.3416		dddmm.mmmm



E/W Indicator	W	E=east or W=west
UTC Position	161229.487	hhmmss.sss
Status	А	A=data valid or V=data not valid
Checksum	*2C	
<cr> <lf></lf></cr>		End of message temination

### **GSA-GNSS DOP and Active Satellites**

Table 4 contains the values of the following example:

\$GPGSA, A, 3, 07, 02, 26,27, 09, 04,15, , , , , 1.8,1.0,1.5\*33.

**Table 4: GSA Data Format** 

Name	Example	Units	Description
Message	\$GPGSA		GSA protocol header
Mode 1	А		See Table 4-2
Mode 2	3		See Table 4-1
Satellite Used	07		Sv on Channel 1
Satellite Used	02		Sv on Channel 2
Satellite Used			Sv on Channel 12
PDOP	1.8		Position Dilution of Precision
HDOP	1.0		Horizontal Dilution of Precision
VDOP	1.5		Vertical Dilution of Precision
Checksum	*33		
<cr> <lf></lf></cr>			End of message termination

Table 4-1: Mode 1



Value	Description
1	Fix not available
2	2D
3	3D

#### Table 4-2: Mode 2

Value	Description			
M	M Manual-forced to operate in 2D or 3D mode			
А	Automatic-allowed to automatically switch 2D/3D			

#### **GSV-GNSS Satellites in View**

#### Table 5 contains the values of the following example:

\$GPGSV, 2, 1, 07, 07, 79,048, 42, 02, 51,062, 43, 26, 36,256, 42, 27, 27, 138,42\*71 \$GPGSV, 2, 2, 07, 09, 23,313, 42, 04, 19, 159, 41, 15,12,041, 42\*41.

**Table 5: GGA Data Format** 

Name	Example	Units	Description
Message ID	\$GPGSV		GSV protocol header
Number of Message	2		Range 1 to 3
Message Number	1		Range 1 to 3
Satellites in View	07		
Satellite ID	07		Channel 1(Range 1 to 32)
Elevation	79	degrees	Channel 1(Maximum 90)
Azinmuth	048	degrees	Channel 1(True, Range 0 to 359)
SNR(C/NO)	42	dBHz	Range 0 to 99,null when not tracking
Satellite ID	27		Channel 4(Range 1 to 32)



Elevation	27	degrees	Channel 4(Maximum 90)
Azimuth	138	degrees	Channel 4(True, Range 0 to 359)
SNR(C/NO)	42	dBHz	Range 0 to 99, null when not tracking
Checksum	*71		
<cr> <lf></lf></cr>			End of message termination

Depending on the number of satellites tracked multiple messages of GSV data may be required.

## **RMC-Recommended Minimum Specific GNSS Data**

#### Table 6 contains the values of the following example:

\$GPRMC, 161229.487, A, 3723.2475, N, 12158.3416, W, 0.13,309.62, 120598,, \*10

**Table 6: RMC Data Format** 

Name	Example	Units	Description
Message ID	\$GPRMC		RMC protocol header
UTS Position	161229.487		hhmmss.sss
Status	А		A=data valid or V=data not valid
Latitude	3723.2475		ddmm.mmmm
N/S Indicator	N		N=north or S=south
Longitude	12158.3416		dddmm.mmmm
E/W Indicator	W		E=east or W=west
Speed Over Ground	0.13	Knots	
Course Over	309.62	Degrees	True
Ground			
Date	120598		Dummy



Magnetic variation		Degrees	E=east or W=west
Checksum	*10		
<cr> <lf></lf></cr>			End of message termination

# **VTG-Course Over Ground and Ground Speed**

Table 7 contains the values of the following example:


\$GPVTG, 309.62, T, M, 0.13, N, 0.2, K\*6E

**Table 7: VTG Data Format** 

Name	Example	Units	Description
Message ID	\$GPVTG		VTG protocol header
Course	309.62	Degrees	Measured heading
Reference	Т		True
Course		Degrees	Measured heading
Reference	М		Magnetic
Speed	0.13	Knots	Measured horizontal speed
Units	N		Knots
Speed	0.2	Km/hr	Measured horizontal speed
Units	К		Kilometer per hour
Checksum	*6E		
<cr> <lf></lf></cr>			End of message termination



## **Manufacturing Process Recommendations**

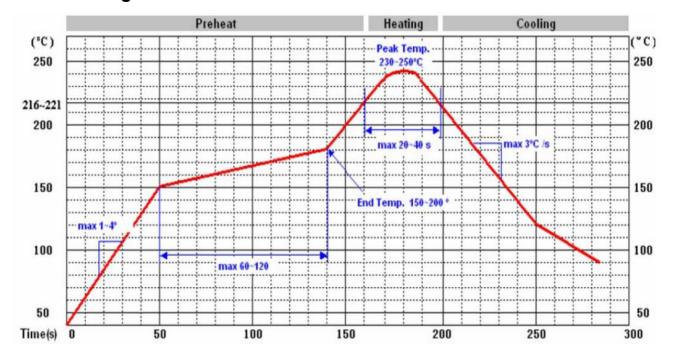

**Note:** The final soldering temperature chosen at the factory depends on additional external factors like choice of soldering paste, size, thickness and properties of the baseboard, etc. Exceeding the maximum soldering temperature in the recommended soldering profile may permanently damage the module.



#### ©Copyright 2013 Gotop Technology Co., Ltd. All Right Reserved

The information contained herein is subject to change without notice.

Gotop Technology Co., LTD

Add:Room 603 Zhantao Technology Building,Minzhi Road,Xinniu Communnity,Minzhi Street,Baoan District,ShenZhen City China.

Not to be reproduced in whole or part for any purpose without written permission of Gotop Technology Inc ('Gotop'). Information provided by Gotop is believed to be accurate and reliable. These materials are provided by Gotop as a service to its customers and may be used for informational purposes only. Gotop assumes no responsibility for errors or omissions in these materials, nor for its use. Gotop reserves the right to change specification at any time without notice.

These materials are provides 'as is' without warranty of any kind, either expressed or implied, relating to sale and/or use of Gotop products including liability or warranties relating to fitness for a particular purpose, consequential or incidental damages, merchantability, or infringement of any patent, copyright or other intellectual property right. Gotop further does not warrant the accuracy or completeness of the information, text, graphics or other items contained within these materials. Gotop shall not be liable for any special, indirect, incidental, or consequential damages, including without limitation, lost revenues or lost profits, which may result from the use of these materials.

Gotop products are not intended for use in medical, life-support devices, or applications involving potential risk of death, personal injury, or severe property damage in case of failure of the product.